



How to adjust driver scores in the CameraMatics Safety Center


1. Click on Safety Center:

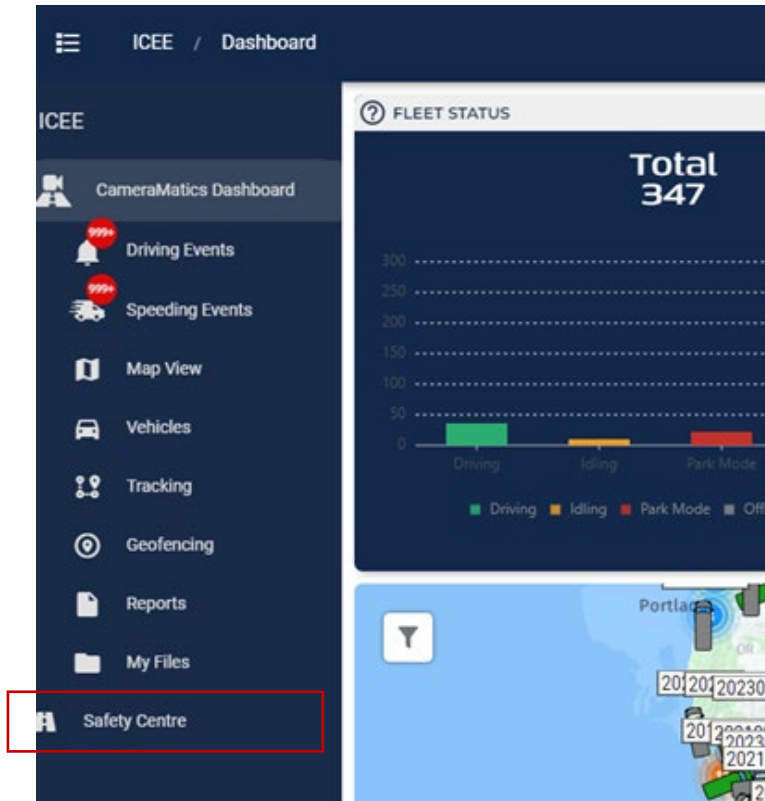


2. Click on the '3 dots' menu in the top right of the screen.

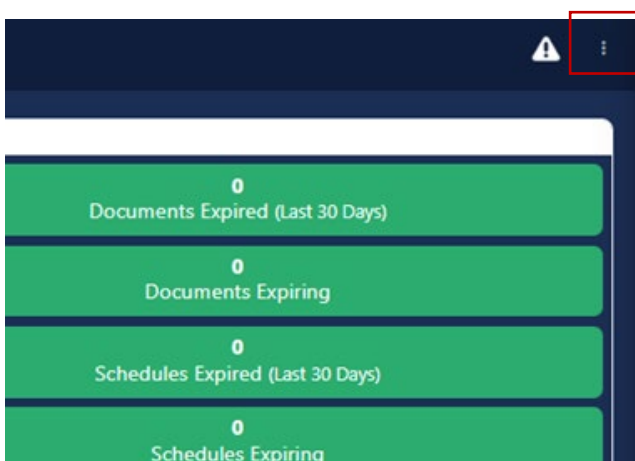


3. Click on the 'Account Settings' in the menu

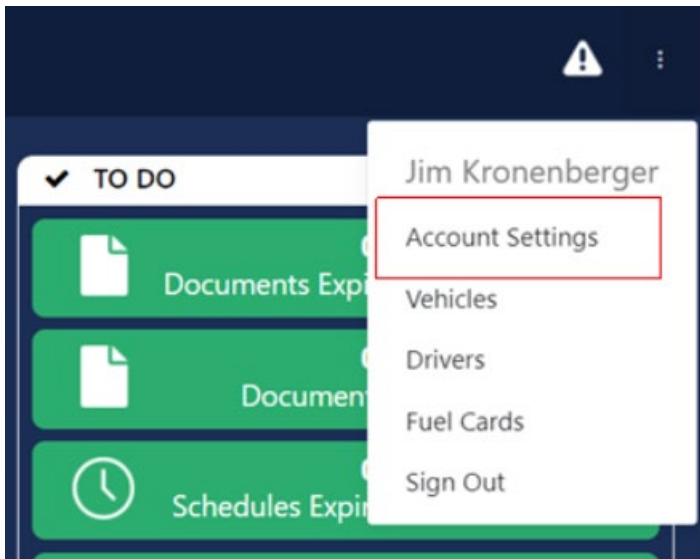

4. Click on 'Driver Scoring' in the menu bar

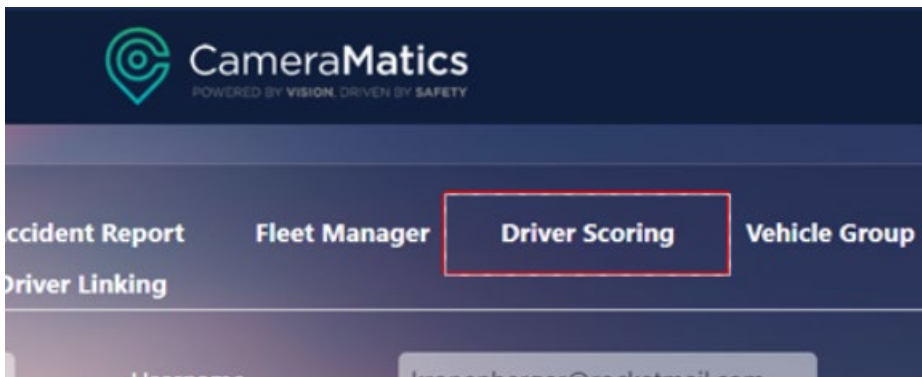

5. Slide the green adjusters to the level of importance for each.

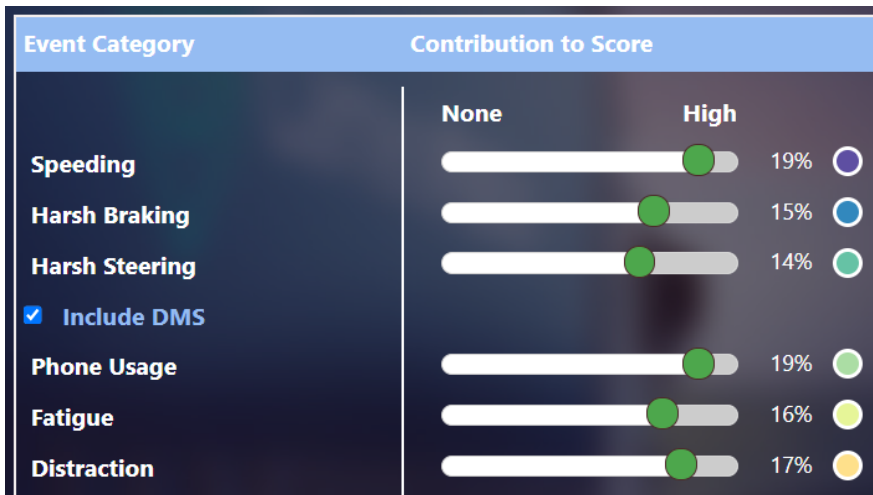

6. Click Save. Your Driver Scores will now auto calculate using your company metrics.

