


How to view driver scores in the CameraMatics Safety Center


1. Click on Safety Center:

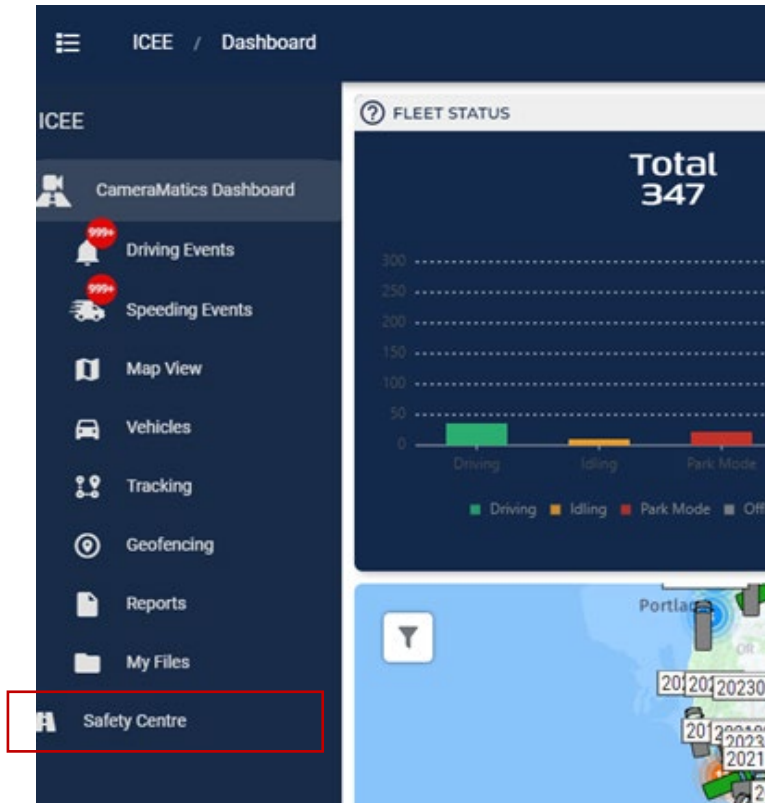


2. Click anywhere inside the FLEET SCORE line graph.



3. Click on View By – and change Groups to Drivers

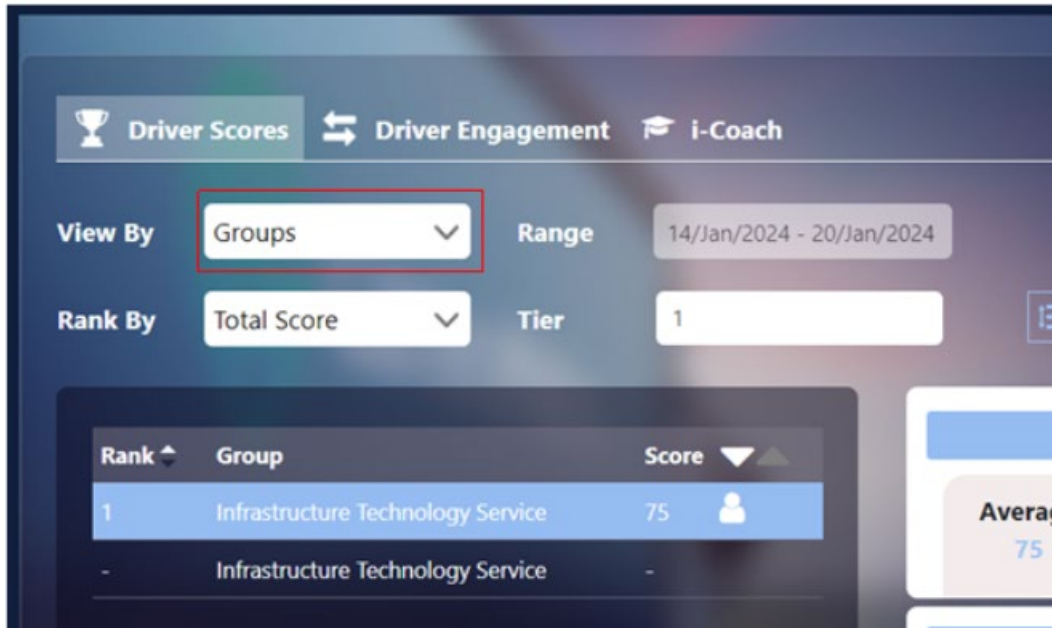

4. Your Driver Scores will now be listed in order of rank.

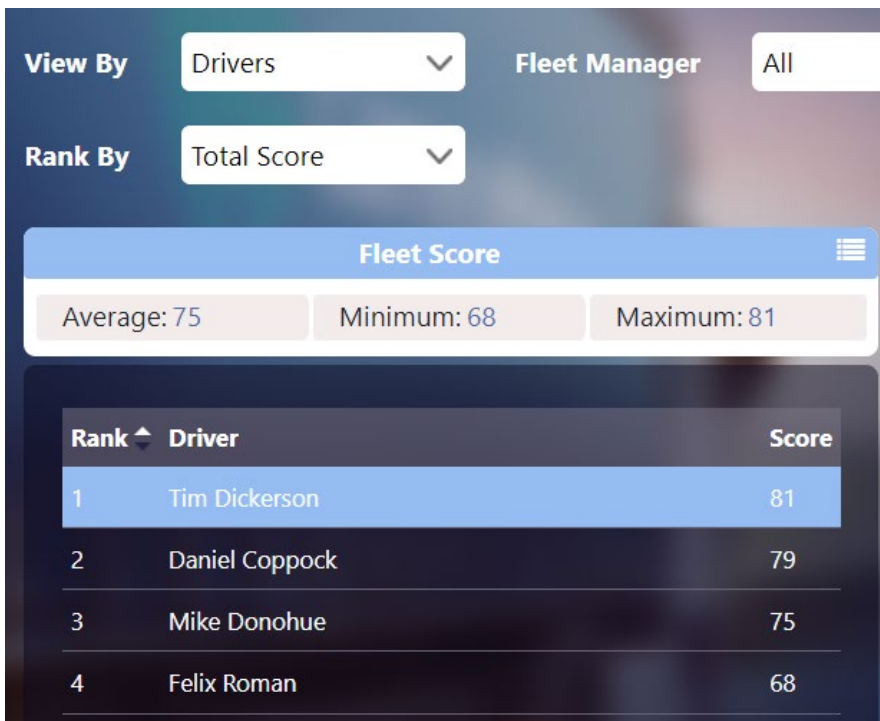

5. Click on the Driver name to see a breakdown of their score card details.
- This driver has a score of 79 due to speeding and fatigue events.

